
Contest® (A)



irLEDFLAT 1x30TCb

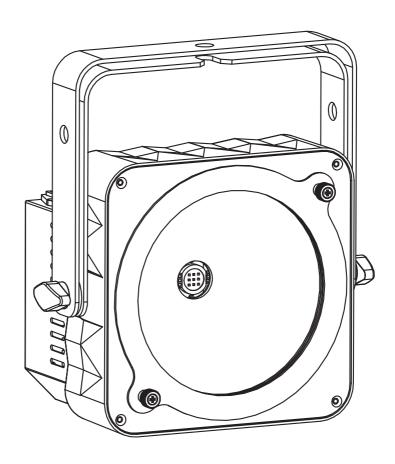

1 - Safety information

Important safety information



This unit is intended for indoor use only. Do not use it in a wet, or extremely cold/hot locations. Failure to follow these safety instructions could result in fire, electric shock, injury, or damage to this product or other property.



This product contains non-isolated electrical components. Do not undertake any maintenance operation when it is switched on as it may result in electric shock.



Any maintenance procedure must be performed by a CONTEST authorised technical service. Basic cleaning operations must thoroughly follow our safety instructions.





WARNING: This unit contains no user-serviceable parts. Do not open the housing or attempt any maintenance by yourself. In the unlikely even your unit may require service, please contact your nearest dealer. In order to avoid any electrical malfunction, please do not use any multi-socket, power cord extension or connecting system without making sure they are



Warning

This product is equipped with Class 2 LEDs. Please avoid looking directly at the beam as it may cause severe eye injuries.



perfectly isolated and present no defect.

Risk of electrocution

To prevent the hazard of electric shocks, do not use extension cords, multi-socket or any other connection system without making sure metal parts completely are out of reach.



Recycling your device

- . As HITMUSIC is really involved in the environmental cause, we only commercialise clean, ROHS compliant products.
- When this product reaches its end of life, take it to a collection point designated by local authorities. The separate collection and recycling of your
 product at the time of disposal will help conserve natural resources and ensure that it is recycled in a manner that protects human health and the
 environment.

Symbols used



This symbol signals an important safety precaution.



The CAUTION symbol signals a risk of product deterioration.



The WARNING symbol signals a risk to the user's physical integrity. The product may also be damaged.



Note: The legislation requires that every device set up in a public space features a double fixation bracket. This security system must hold 10 times the weight of the device.

Instructions and recommendations

1 - Please read carefully:

We strongly recommend to read carefully and understand the safety instructions before attempting to operate this unit.

2 - Please keep this manual:

We strongly recommend to keep this manual with the unit for future reference.

3 - Operate carefully this product:

We strongly recommend to take into consideration every safety instruction.

4 - Follow the instructions:

Please carefully follow each safety instruction to avoid any physical harm or property damage.

5 - Avoid water and wet locations:

Do not use this product in rain, or near washbasins or other wet locations.

6 - Installation:



We strongly encourage you to only use a fixation system or support recommended by the manufacturer or supplied with this product. Carefully follow the installation instructions and use the adequate tools.

Always ensure this unit is firmly fixed to avoid

vibration and slipping while operating as it may result in physical injury.

7 - Ceiling or wall installation:

Please contact your local dealer before attempting any ceiling or wall installation.

8 - Ventilation:

The cooling vents ensure a safe use of this product, and avoid any overheating risk.

Do not obstruct or cover these vents as it may result in overheating and potential physical injury or product damage. This product should never been operated in a closed non-ventilated area such as a flight case or a rack, unless cooling vents are provided for the purpose.

9 - Heat exposure :

Sustained contact or proximity with warm surfaces may cause overheating and product damages. Please keep this product away from any heat source such as a heaters, amplifiers, hot plates, etc...

10 - Electric power supply:



This product can only be operated according to a very specific voltage. These information are specified on the label located at the rear of the product.

11 - Power cords protection:



Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at lugs, convenience receptacles

and the point where they exit from the fixture.

12 - Cleaning precautions:



Unplug the product before attempting any cleaning operation. This product should be cleaned only with accessories recommended by the manufacturer. Use a damp cloth to clean the surface. Do not wash this product.

13 - Long periods of non use:



Disconnect the unit's main power during long periods of non use.

14 - Liquids or objects penetration:



Do not let any object penetrate this product as it may result in electric shock or fire.

Never spill any liquid on this product as it may infiltrate the electronic components and result in electric shock or fire.

15 - This product should be serviced when:



- Please contact the qualified service personnel if:
 The power cord or the plug has been damaged.
- Objects have fallen or liquid has been spilled into the appliance.
- The appliance has been exposed to rain or water.
- The product does not appear to operate normally.
- The product has been damaged.

16 - Inspection/maintenance:

Please do not attempt any inspection or maintenance by yourself. Refer all servicing to qualified personnel.

17 - Operating environment :



Ambient temperature and humidity: +5 - +35°C, relative humidity must be less than 85% (when cooling vents are not obstructed).

Do not operate this product in a non-ventilated, very humid or warm place..

2 - Main characteristics

• Features:

- Metal housing
- Double holding brackets for ground and aerial use
- Rear display
- Frost filter allowing a 80° beam aperture angle
- Internal thermal protection

• Functions:

- Built-in command panel with digital drop-down display for:
 - DMX addressing
 - Choosing the number of channels: 2, 3, 4, 5 or 6
 - Choosing the built-in programs
 - Choosing the preset colours
 - Master/slave mode
 - Music-sensitive mode and choosing the mic sensitivity
 - Accessing the user program

3 - Technical specifications


- 1x30W TRI COB LED 30.000 hours
- Beamwidth: 25°
- The Frost filter allows a 80° beam aperture angle
- Light output: 413 Lux at 3m
- 20-step customisable user program
- Power consumption: 45W
- Power supply: AC 100/240V 50/60Hz
- Power input/output
- DMX input/output
- · Double holding bracket
- Dimensions: 208 x 221 x 120 mm
- Net weight: 2.1 Kg

· Package contents:

The package must contain the following products:

- A projector
- A Frost filter
- A user guide
- A double holding bracket
- A 2-pole + earth IEC power cord

4 - Description du panneau arrière

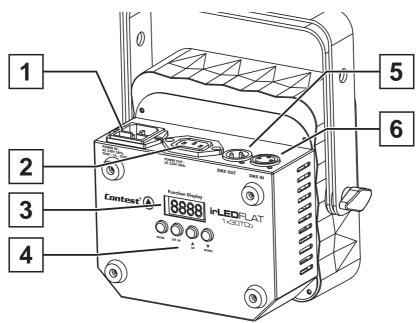

1 Power input socket

Allows you to connect the projector to an electrical outlet. Please make sure the voltage is in adequation with the product indications.

Fuse: If need to replace the fuse, please make sure the new fuse has exactly the same characteristics as the original one.

2 Power output socket

Allows you to link several projectors together via a Male/ Female IEC cord.

3 Display

This intuitive display allows you to configure your projector. Please refer to the next paragraphs for more details about the projector configuration. The display automatically shuts off after 30 seconds of inactivity.

4 Menu buttons

MODE button

Allows you to access menus and select a function

SETUP button

Allows you to configure the parameters of the functions chosen with the MODE button.

UP and DOWN Buttons

Allows you to increase or decrease selected values.

5 DMX output

3-pin male XLR plug hardwired as follows :

- Mass: 1
- Negative signal: 2
- Positive signal: 3

6 DMX input

3-pin female XLR plug hardwired as follows:

- Mass: 1
- Negative signal: 2
- Positive signal: 3

5 - Internal menu

Access the internal menu by pressing MODE.

To access a submenu, press MODE again.

If you want the display to lit off when the menu remains inactive for more than 20 seconds, press simultaneously **MODE** and **DOWN**.

| Mode | SETUP | UP and DOWN | Action | | |
|--------------------------|----------------------|---------------|---|--|--|
| | | CHR3 | 3 channels: RGB dimmers | | |
| | | [Hb4 | 4 channels: RGB dimmers / Main dimmer, Strobe | | |
| | | CHC2 | 2 channels: Fixed colours, Macros / Main dimmer, Strobe | | |
| DMX modes | CH35 | | 5 channels: RGB dimmers / Dimmer / Strobe | | |
| | | CHE6 | 6 channels: RGB dimmers / Main dimmer / Speed, Strobe / Fixed colours, Macros, Music-sensitive mode | | |
| | DMX address | ROO 1 RS 12 | DMX addressing | | |
| | Colour | CL.00 (17.16) | Black-out, Coulours 1 to 10 and 6 macros | | |
| Fixed colours and macros | Strobe | F5.00 F5.99 | Strobe speed : FS.00 = No strobe ; FS.99 = Full speed | | |
| | Speed | E. D 1 E. 99 | Macros speed | | |
| | | r.000 (r.255 | Red: 0 - 100% | | |
| RGB dimmers | | 6.000 6.255 | Green: 0 - 100% | | |
| (Manual mode) | | 6.000 6.255 | Blue: 0 - 100% | | |
| | | F5.00 F5.99 | Strobe speed : FS.00 = No strobe ; FS.99 = Full speed | | |
| Auto mode | RUED F5.00 F5.99 | | Strobe speed : FS.00 = No strobe ; FS.99 = Full speed | | |
| Music-sensitive mode | SUDO (SU3 1 | | SU.00 = min sensitivity ; SU.31 = max sensitivity | | |
| Slave mode | SLAu | | Activates the slave mode | | |
| | USEr | PLAY SEOP | Plays or stops the user program | | |
| | | E. D 1 E. 99 | Configures the main speed for every step | | |
| Playing the user program | | Fd00 Fd99 | Configures the crossfading for every step | | |
| | | F5.00 F5.99 | Configures the strobe speed for every step | | |
| | | d000 d255 | Configures the main dimmer for every step | | |

| User program edition | Ed IL | SC.D 1 SC.20 | Allows you to choose the max number of scenes: 1 - 20 total |
|-------------------------|-------|--------------|---|
| | | SE.0 1 SE.20 | Scene you are currently editing |
| | | r.000 r.255 | Red level settings of the selected scene |
| | | 0.000 0.255 | Green level settings of the selected scene |
| | | 6000 6255 | Blue level settings of the selected scene |

6 - The various DMX modes

6.1 - 3-channel mode: R / G / B = $\boxed{\square H \square}$

| | DMX | Effect |
|-----------|-----------|-----------------|
| Channel 1 | 000 - 255 | Red: 0 - 100% |
| Channel 2 | 000 - 255 | Green: 0 - 100% |
| Channel 3 | 000 - 255 | Blue: 0 - 100% |

6.2 - 4-channel mode: R / G / B / Dimmer and Strobe = $\boxed{\ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ }$

| | DMX | Effect | | |
|-----------|-----------|---------------------|--|--|
| Channel 1 | 000 - 255 | Red: 0 - 100% | | |
| Channel 2 | 000 - 255 | Green: 0 - 100% | | |
| Channel 3 | 000 - 255 | Blue: 0 - 100% | | |
| | 000 - 189 | Main dimmer; 0-100% | | |
| Channel 4 | 190 - 250 | Strobe speed | | |
| | 251 - 255 | Full power | | |

6.3 - 2-channel mode : Fixed colours, Macros / Dimmer, Speed or music-sensitive mode = $\boxed{\Box H \Box \Box}$


| | Channel 1 | Channel 2 | | |
|---|---|---------------------------------------|--|--|
| 000 - 015 | Off (LEDs éteintes) | | | |
| 016 - 030 | Red | | | |
| 031 - 045 | Orange | | | |
| 046 - 060 | Yellow | 000 - 255 Dimmer : 0 - 100% | | |
| 061 - 075 | Green | | | |
| 076 - 090 | Cyan | | | |
| 091 - 105 | Blue | | | |
| 106 - 120 | Pink | | | |
| 121 - 135 | Magenta | | | |
| 136 - 150 Cool white (6000°K) 151 - 165 Warm white (3200°K) | | | | |
| 151 - 165 | | | | |
| 166 - 178 | Macro 1 | | | |
| 179 - 191 | Macro 2 | 000 - 255 | | |
| 192 - 204 | Macro 3 | | | |
| 205 - 217 | Macro 4 | Macros speed | | |
| 218 - 230 | Macro 5 | | | |
| 231 - 243 | Macro 6 | | | |
| 244 - 255 | Music-sensitive mode (only for Macro 1) | 000 - 255 Mic sensitivity | | |


| | DMX | Effect |
|-----------|----------------------------------|---------------------|
| CHANNEL 1 | 000 - 255 | Red: 0 - 100% |
| CHANNEL 2 | 000 - 255 Green: 0 - 100% | |
| CHANNEL 3 | 000 - 255 Blue: 0 - 100% | |
| CHANNEL 4 | 000 - 255 | Main dimmer: 0-100% |
| CHANNEL 5 | 000 | No function |
| | 001 - 255 | Strobe speed |



| Channel 6 | | | Channel 5 | Channel 4 | Channel 3 | Channel 2 | Channel 1 |
|-----------|-----------|--|---------------------------------|---|----------------------------------|-----------------------------|---------------------------------|
| 1 | 000 - 015 | Black-out | | | Blue (000 - 255) 0 to 100% | White (000 - 255) 0 to 100% | Red (000 - 255) 0 to 100% |
| 2 | 016 - 030 | Red | | | | | |
| 3 | 031 - 045 | Orange | | | | | |
| 4 | 046 - 050 | Yellow | 255) | | | | |
| 5 | 061 - 075 | Green | - 000) | | | | |
| 6 | 076 - 090 | Cyan | Strobe (000 - 255) | | | | |
| 7 | 091 - 105 | Blue | Ö | St Main dimmer (000 - 255) | No function | No function | No function |
| 8 | 106 - 120 | Pink | | | | | |
| 9 | 121 - 135 | Magenta | | | | | |
| 10 | 136 - 150 | Cool white | | | | | |
| 11 | 151 - 165 | Warm white | | Main | | | |
| 12 | 166 - 178 | Macro 1 | | | | | |
| 13 | 179 - 191 | Macro 2 | (22) | | | | |
| 14 | 192 - 204 | Macro 3 | Speed (000 - 255) | | | | |
| 15 | 205- 217 | Macro 4 | 0) pec | | | | |
| 16 | 218 - 230 | Macro 5 | Sp¢ | ď | | | |
| 17 | 231 - 243 | Macro 6 | | | | | |
| 18 | 244 - 255 | Music-sensitive mode (only for Macro 1 | Mic sensitivity 000 - 255 | | | | |

7 - Dimensions

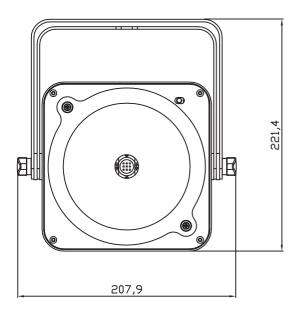

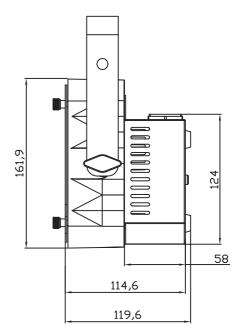

8 - Notes

