
Contest® (A)

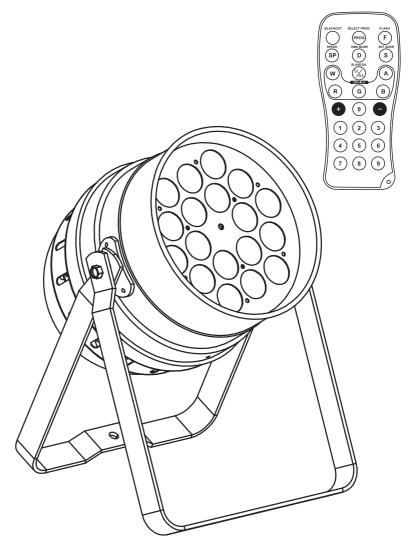





USER GUIDE

1 - Safety information

Important safety information



This unit is intended for indoor use only. Do not use it in a wet, or extremely cold/hot locations. Failure to follow these safety instructions could result in fire, electric shock, injury, or damage to this product or other property.



Any maintenance procedure must be performed by a CONTEST authorised technical service. Basic cleaning operations must thoroughly follow our safety instructions.



This product contains non-isolated electrical components. Do not undertake any maintenance operation when it is switched on as it may result in electric shock.

Symbols used



This symbol signals an important safety precaution.



The WARNING symbol signals a risk to the user's physical integrity. The product may also be damaged.



The CAUTION symbol signals a risk of product deterioration.

Instructions and recommendations

1 - Please read carefully:

We strongly recommend to read carefully and understand the safety instructions before attempting to operate this unit.

2 - Please keep this manual:

We strongly recommend to keep this manual with the unit for future reference.

3 - Operate carefully this product :

We strongly recommend to take into consideration every safety instruction.

4 - Follow the instructions:

Please carefully follow each safety instruction to avoid any physical harm or property damage

5 - Avoid water and wet locations :

Do not use this product in rain, or near washbasins or other wet locations 6 - Installation:

We strongly encourage you to only use a fixation system or support recommended by the manufacturer or supplied with this product. Carefully follow the installation instructions and use the adequate tools.

Always ensure this unit is firmly fixed to avoid vibration and slipping while operating as it may result in physical injury.

7 - Ceiling or wall installation:

Please contact your local dealer before attempting any ceiling or wall installation.

8 - Ventilation :

The cooling vents ensure a safe use of this product, and avoid any overheating risk. Do not obstruct or cover these vents as it may result in overheating and potential physical injury or product damage. This product should never been operated in a closed non-ventilated area such as a flight case or a rack, unless cooling vents are provided for the purpose.

WARNING: This unit contains no user-serviceable parts. Do not open the housing or attempt any maintenance by yourself. In the unlikely even your unit may require service, please contact your nearest dealer.





In order to avoid any electrical malfunction, please do not use any multi-socket, power cord extension or connecting system without making sure they are perfectly isolated and present no defect.



Warning

This product is equipped with Class 2 LEDs. Please avoid looking directly at the beam as it may cause severe eye injuries.

Recycling your device



- · As HITMUSIC is really involved in the environmental cause, we only commercialise clean, ROHS compliant products.
- · When this product reaches its end of life, take it to a collection point designated by local authorities. The separate collection and recycling of your product at the time of disposal will help conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment

9 - Heat exposure:

Sustained contact or proximity with warm surfaces may cause overheating and product damages. Please keep this product away from any heat source such as a heaters, amplifiers, hot plates, etc...

10 - Electric power supply:

This product can only be operated according to a very specific voltage. These information are specified on the label located at the rear of the product.

11 - Power cords protection:

Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at lugs, convenience receptacles and the point where they exit from the fixture.

12 - Cleaning precautions:

Unplug the product before attempting any cleaning operation. This product should be cleaned only with accessories recommended by the manufacturer. Use a damp cloth to clean the surface. Do not wash this product.

13 - Long periods of non use:

Disconnect the unit's main power during long periods of non use.

14 - Liquids or objects penetration:

Do not let any object penetrate this product as it may result in electric shock or fire. Never spill any liquid on this product as it may infiltrate the electronic components and result in electric shock or fire.

15 - This product should be serviced when:

- Please contact the qualified service personnel if:
- The power cord or the plug has been damaged.
- Objects have fallen or liquid has been spilled into the appliance.
- The appliance has been exposed to rain or water.
- The product does not appear to operate normally.
- The product has been damaged.

16 - Inspection/maintenance:

Please do not attempt any inspection or maintenance by yourself. Refer all servicing to qualified personnel.

17 - Operating environment: Ambient temperature and humidity: +5 - +35°C, relative humidity must be less than

85% (when cooling vents are not obstructed). Do not operate this product in a non-ventilated, very humid or warm place.

2 - Introduction

These projectors are equipped with 18 super-powerful 5-in-1 LEDs with high-performance individual lenses.

In addition to primary colours (such as blue, red, green...) the white shades and Amber create warm and brightful colours. The irLED64-18x10FIVE are supplied with an infrared remote control to access colour control, built-in programs, DMX settings and a lot more.

They also have a new double mounting bracket revolutionising ground handling. Thanks to the automatic abutment point, tightening the projector is independent from the mounting bracket blocking. You can now manipulate and adjust the projectors with an optimal stability.

3 - Characteristics

- Their strenaths:
 - 5-in-1 LEDs
 - Brightness and wide opening angle
 - Natural light and colours
 - Manual, DMX and music-sensitive modes, built-in programs
 - Infrared remote control supplied
 - Power input/output
- Functions:
 - Built-in command panel with digital drop-down display for:
 - DMX addressing
 - >Choosing the number of channels: 2 8
 - > Choosing the built-in programs
 - Choosing the preset colours (27 total)
 - Master/Slave mode
 - Music-sensitive mode and choosing the mic sensitivity
 - >Edit and play your own 20-step programs
 - New infrared remote control giving you access to every remote function
 - Deactivating the use of the infrared remote control

· Package contents:

The package must contain the following products:

- A projector
- A user guide
- A double mounting bracket
- An infrared remote control
- A 2-pole + earth power cord

· Optical:

- 18 x 5-in-one LEDs (RGB + White + Amber)- 50.000 hours

- Light output: 4310 Lux at 2 m

- Beamwidth: 40°

Connectors:

- DMX IN and OUT via 3-pin XLR,

- POWER IN/OUT via IEC sockets

Power supply: 110/240 V 50/60 Hz


• Power consumption: 165 W

• Finish: Black or aluminium

• Dimensions: 340 x 270 x 220 mm)

• Weight: 4.6 kg

4 - Description

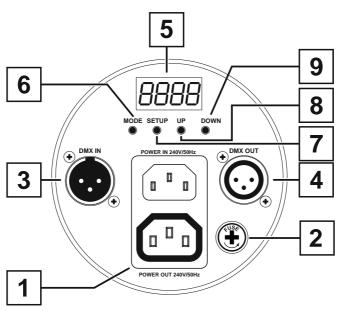

1 Power input/output socket

Allows you to connect the projector to an electrical outlet and to link several projectors together via a Male/Female IEC cord. Please make sure the voltage is in adequation with the product indications.

Caution: Do NOT go over 700W on the same power source.

2 Fuse

If need to replace the fuse, please make sure the new fuse has exactly the same characteristics as the original one.

3 DMX input

3-pin female XLR plug hardwired as follows :

- Mass: 1
- Negative signal: 2
- Positive signal: 3

4 DMX output

3-pin male XLR plug hardwired as follows :

- Mass: 1
- Negative signal: 2
- Positive signal: 3

5 Display

This intuitive display allows you to configure your projector. Please refer to the next paragraphs for more details about the projector configuration.

6 MODE button

Allows you to access menus and select a function.

7 | SETUP button

Allows you to configure the parameters of the functions chosen with the MODE button.

8 UP button

Press UP to increase the adjustable values or browse the submenus.

9 Touche DOWN

Press DOWN to decrease the adjustable values or browse the sub-menus.

5 - Menus and functions

Access the internal menu by pressing MODE.

To access a submenu, press MODE again.

Press SETUP to configure the selected function.

Simultaneously press MODE and UP if you want the display to stay lit all the time.

If you want the display to lit off when the menu remains inactive for more than 20 seconds, press simultaneously MODE and DOWN..

The irLED64FIVE projectors feature several DMX modes to be fully compatible with different remote controls and projectors. Use the MODE button the choose a DMX mode. They are listed in the table below.


Mode	SETUP	UP and DOWN	Action
		CHRS	5 channes: R / G / B / W / A Dimmers
		CH68	6 channels: R / G / B / W / A Dimmers, Main dimmer and Strobe
		CHC2	2 channels: Fixed colours and macros / Dimmer, Strobe and Music-sensitive mode
DMX modes		CH38	8 channels: RGBWA Dimmers/ Dimmer and Speed / Strobe / Macros
		СНЕЧ	4 channels: RGB Dimmers / Main dimmer and Strobe
		CHFS	5 channels: RGB Dimmers / Main dimmer and Strobe / White
	Address	<u>a00 1 a5 12</u>	DMX addressing
E ododo o od	ELI	00 CL32	Blackout, 1-27 fixed colours selection, step colour program selection, crossfade colour program selection, and 3x2 colour programs with crossfade transitions
Fixed colours and programs	Strobe	F500 F599	Strobe speed: FS.00 = no strobe; FS.99 = Max. speed Only for static colours
	Speed	JP.O 1 JP.99	Crossfade programs speed settings Only available for programs with crossfade transitions
		r.000 (r.255)	Red: 0 - 100%
		G000 G255	Green: 0 - 100%
RVBWA Dimmers		6000 b255	Blue: 0 - 100%
NVDWA DIIIIIIIEIS		H000 H255	White: 0 - 100%
		R000 R255	Amber: 0 - 100%
	Strobe	F500 F599	Strobe speed : FS.00 = No strobe ; FS.99 = Full speed
Automatic mode		RUFO.	The automatic mode is activated
Automatic mode	Strobe	F500 F599	Strobe speed : FS.00 = No strobe ; FS.99 = Full speed
Music-sensitive mode	Mic sensitivity		SU.00 = min. sensitivity ; SU.31 = max. sensitivity
Slave mode		SLRu.	Starts the user program


	USEr.	PLRY SEOP	Allows you to set the duration of the user program	
User program		E. D 1 E99	Configures the fade out time of every step of the program	
		Fd.00 Fd.99	Allows you to set the flash rate of every step of the program	
		F500F5.99	Allows you to configure the strobe speed of every step of the program	
		<u>a000</u> a255	Allows you to configure the max output (dimmer) of every step of the program	
	Ed.IL	SEO 1 SE20	Allows you to configure the number of steps of your user prograr 20 steps max.	
		SEO 1 SE20	Selects the steps you want to create/modify	
		r.000 (r.255	Red level settings for the selected step	
User program		G000 G255	Green level settings for the selected step	
edition		6000 6255	Blue level settings for the selected step	
		H000 H255	White level settings for the selected step	
		R000 R255	Amber level settings for the selected step	
		rEon rEof	Activates or deactivates the use of an infrared remote control to control the projector.	

Note:

- Choosing a DMX mode does not require any configuration. Only the DMX address can be configured in this
 mode.
- In Auto mode, the strobe speed only can be configured.

More details about the fixed colours and sequences menu

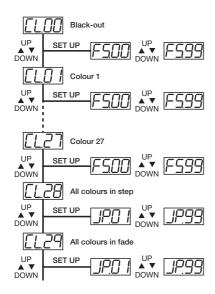

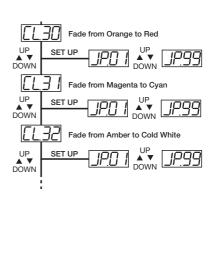

6 - The various DMX modes

6.1 - 5-channel mode = RGBWA = [-HRS]

	DMX values	Effects	
CHANNEL 1	000 - 255	Red from 0 - 100%	
CHANNEL 2	000 - 255	Green from 0 - 100%	
CHANNEL 3	000 - 255	Blue from 0 - 100%	
CHANNEL 4	000 - 255 White from 0 - 100%		
CHANNEL 5	000 - 255	Amber from 0 - 100%	

6.2 - 6-channel mode = RGBWA with Dimmer and Strobe = $\boxed{\Box H_D \Box}$

	DMX values	Effects	
CHANNEL 1	000 - 255	Red from 0 - 100%	
CHANNEL 2	000 - 255	Green from 0 - 100%	
CHANNEL 3	000 - 255	Blue from 0 - 100%	
CHANNEL 4	000 - 255	White from 0 - 100%	
CHANNEL 5	000 - 255	Amber from 0 - 100%	
	000 - 189	Main dimmer from 0 - 100%	
CHANNEL 6	190 - 250	Slow to fast strobe	
	251 - 255	Full power	

6.3 - 2-channel mode : Fixed colours/Macros/Dimmer/Speed = $\boxed{\square \ H \square \ \square}$

CHANNEL 1		CI	CHANNEL 2		
DMX values	Effects	DMX values	Effects		
000 - 005	Off				
006 - 010	Red				
011 - 015	Orange				
016 - 020	Yellow				
021 - 025	Green				
026 - 030	Cyan				
031 - 035	Blue				
036 - 040	Pink				
041 - 045	Magenta				
046 - 050	Cold White				
051 - 055	Warm White				
056 - 060	Full White		D: 0 4000/		
061 - 065	Light Pink				
066 - 070	Light Apricot	000 - 255			
071 - 075	Light Ocre	000 - 255	Dimmer: 0 - 100%		
076 - 080	Green Pearl				
081 - 085	Grey Pearl				
086 - 090	Pearl				
091 - 095	Blue Pearl				
096 - 100	Green Veronese				
101 - 105	Blue Lagon				
106 - 110	,				
111 - 115					
116 - 120	Cerulean Blue				
121 - 125	Fluo				
126 - 130	Candy				
131 - 135	Amber				
136 - 140	Sunset				
141 - 150	Macro 1 : Colour sequencing without crossfade				
151 - 160	Macro 2 : Colour sequencing with crossfade				
161 - 170			Speed: 0 - 100%		
171 - 180	Macro 4 : Magenta to Cyan crossfade				
191 - 190	Macro 5 : Amber to Cold White crossfade				
191 - 255	Music-sensitive colour macro: Colours and macros music-sensitive sequencing in a loop	000 - 255	Mic sensitivity		

6.4 - 8-channel mode = RGBWA dimmers/Fixed colours/Macros/Dimmer/Speed, Sound/Strobe = $\boxed{\Box H_{\Box} \Box}$

	CHANNEL 8	CHAN. 7	CHAN 6	NEL	CHAN. 5	CHAN. 4	CHAN. 3	CHAN. 2	CHAN. 1
000 - 005	Off	No strobe	if channel 8 > 5	if channel 8 < 6	Amber (000-255)	White (000-255)	Blue (000-255)	Green (000-255)	Red (000-255
006 - 010	Red								
011 - 015	Orange								
016 - 020	Yellow								
021 - 025	Green								
026 - 030	Cyan								
031 - 035	Blue								
036 - 040	Pink								
041 - 045	Magenta								
046 - 050	Cold White		<u>8</u>						
051 - 055	Warm White		ann						
056 - 060	Full White		(c)			No function			No function
061 - 065	Light Pink		onus				No function		
066 - 070	Light Apricot		Main dimmer for fixed colours (channel 8) 000 - 255						
071 - 075	Light Ocre		ooo - 255						
076 - 080	Green Pearl		, ži 00	. (5)				No function	
081 - 085	Grey Pearl		l of re	1 2					
086 - 090	Pearl) mr	Main dimmer for RGBWA colours (channels 1 - 5) 000 - 255	No function				
091 - 095	Blue Pearl	Strobe at increasing speed (000 - 255)	iệ						
096 - 100	Green Veronese	ds fo	lain lain						
101 - 105	Blue Lagon	sinç 55)	≥						
106 - 110	Sky Blue	tt increasing (000 - 255)							
111 - 115	Light Blue	t ii		%B% 000	lo fi	lo fi	l of	of 1	l o
116 - 120	Cerulean Blue) 9e a		, PG		_	~	_	_
121 - 125	Fluo	trok		ģ					
126 - 130	Candy	S		E E					
131 - 135	Amber			Main dim					
136 - 140	Sunset								
141 - 150	Macro 1 (colour sequencing without crossfade)								
151 - 160	Macro 2 : Colour sequencing with crossfade								
161 - 170	Macro 3 : Orange to Red crossfade		Macros speed (000 - 255)						
171 - 180	Macro 4 : Magenta to Cyan crossfade		(665 255)						
181 - 190	Macro 5 : Amber to Cold White crossfade								
191 - 255	Music-sensitive colour macro: Colours and macros music-sensitive sequencing in a loop		Mic sensitivity (000 - 255)						

	Values	Effects
CHANNEL 1	ANNEL 1 000 - 255 Red from 0 - 100%	
CHANNEL 2	000 - 255	Green from 0 - 100%
CHANNEL 3	000 - 255	Blue from 0 - 100%
	000 - 189	Main dimmer from 0 - 100%
CHANNEL 4	190 - 250	Slow to fast strobe
	251 - 255	Full power

6.6 - 5-channel mode = RGB + W (Pure RGB compatible, with White on the last channel) = $\boxed{[HFS]}$

	Values	s Effects	
CHANNEL 1	000 - 255 Red from 0 - 100%		
CHANNEL 2	000 - 255	Green from 0 - 100%	
CHANNEL 3	000 - 255	Blue from 0 - 100%	
	000 - 189	Main dimmer from 0 - 100%	
CHANNEL 4	190 - 250	Slow to fast strobe	
	251 - 255	Full power	
CHANNEL 5	000 - 255 White from 0 - 100%		

7 - Infrared remote control

The infrared remote control supplied with the projectors allows you to remotely access all the functions of the projectors. The infrared sensor is located on the front of the projector.

Notes: The remote control can also be used when the projector is in DMX mode.

The display always indicate the status of your projector.

- 1 Black out button: Turns the projectors ON or OFF.
- 2 SELECT PROG button: Allows you to launch a built-in program or choose fixed colours. 4 different modes are available, each pressure on the SELECT PROG button changes of DMX mode.

1 st pressure	Red LEDs flashing: Use the 1 to 9 buttons and + and - buttons to choose fixed colours, step programs and crossfade sequences. Adjust the strobe speed with the Flash button and the + and - buttons. Adjust the programs speed with the SPEED button and the + and - buttons.
2 nd pressure	Blue LEDs flashing: Auto mode. Adjust the strobe speed with the Flash button and the + and - buttons. Adjust the programs speed with the SPEED button and the + and - buttons.

- 3 FLASH button: Activates or deactivates the Flash mode. Increase or decrease the flash speed with the + and buttons of the remote control.
- **4 SPEED button**: Allows you to modify the Step and crossfade programs speed. Increase or decrease the speed with the + and buttons of the remote control.

6 - DMX mode selection - DMX MODE button

There are 6 different DMX modes.

You will need to select a DMX mode before controlling your projector in DMX mode;

Press the DMX MODE button and use the + and - buttons to switch from one mode to another:

LEDs ON	Mode
Red	CHRS
Green	[Hb6]
Blue	CHC2
White	[Hd8
Amber	СНЕЧ
Red and Blue	CHFS

- 7 SL/SA button: Activates the music-sensitive mode (SA) or slave mode (SL). When using the music-sensitive mode (Green LEDs ON), use the + and buttons to adjust the sensitivity. The slave mode is indicated by red LEDs.
- 8 - SET ADDR buttons and 0, 1, 2, 3, 4, 5, 6, 7, 8 and 9: Allows you to configure your projectors DMX address.

For instance, if you want to configure the address 245:

- Press SET ADDR, all the LEDs are flashing to indicate the process beginning.
- Press 2, the green LEDs of your projectors lit up to indicate the hundreds digit has been saved.
- Press 4, the blue LEDs of your projector lit up to indicate the tenths digit has been saved.
- Then press 5. All the LEDs will flash to confirm you the address has been saved properly.

Note: For values with 1 or 2 digits, you will need to write down the 0. This means for the address 5, you need to enter 0.0 and 5.

9 - R,G,B, W and A buttons: Adjust the colours brightness, R for Red, G for Green, B for blue, W for white, and A for Amber. Increase or decrease the brightness with the + and - remote control buttons.

