


RS05

Ecran acoustique pour microphone

Merci d'avoir choisi l'un de nos appareils Woodbrass. Veuillez lire attentivement ce manuel d'utilisation et suivre les instructions pour éviter tout risque d'endommagement de l'appareil dû à une mauvaise manipulation. Conservez ce guide de l'utilisateur pour référence ultérieure.



CONTENU DE LA BOÎTE

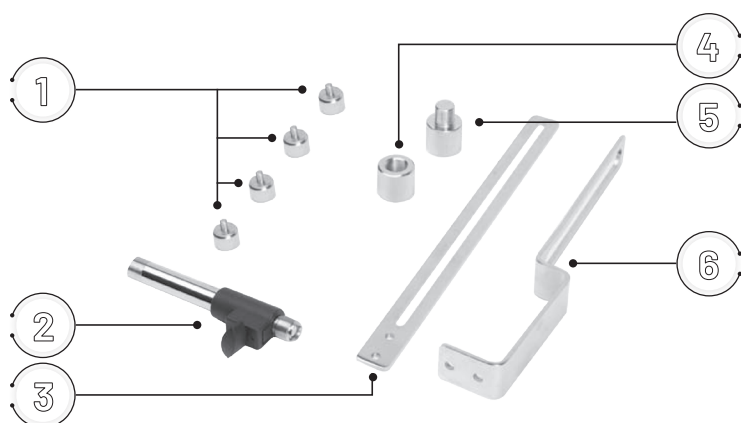

DESCRIPTION

1	molettes de serrage [4 pièces]
2	tube support de microphone
3	Barre de fixation verticale
4	Molette de serrage du tube micro
5	Molette de serrage sur pied de micro
6	Barre de fixation horizontale

INSTRUCTIONS DE MONTAGE

Assemblez les éléments selon le schéma de montage ci-contre.

1 - A l'aide de deux molettes (1), fixez la barre (3) au dos de l'écran acoustique.

2 - Repérez les deux trous au bas de la barre (3), alignez les avec les deux trous de la barre (6) et reliez-les en vissant deux molettes (1).

3 - Vissez la molette (5) sur un pied de micro muni d'un filetage 5/8".

4 - Placez la barre (6) sur la molette (5) et passez la partie filetée à travers le trou oblong.


5 - Placez la molette (4) par dessus la barre (6) et vissez-la dans la partie filetée de la molette (5).

6 - Vissez la tube support de microphone (2) dans la partie filetée de la molette (4).

7 - Le tube support de microphone (2) est livré avec un adaptateur de filetage 3/8" <-> 5/8", permettant de fixer tout type de pince ou de suspension.

A : les vis de la barre (3) peuvent être légèrement desserrées pour régler l'écran acoustique en hauteur. Resserrer-les quand vous avez atteint la position souhaitée.

B : la molette de serrage (4) peut être légèrement desserrée pour régler l'écran acoustique en profondeur. Resserrer-la quand vous avez atteint la position souhaitée.

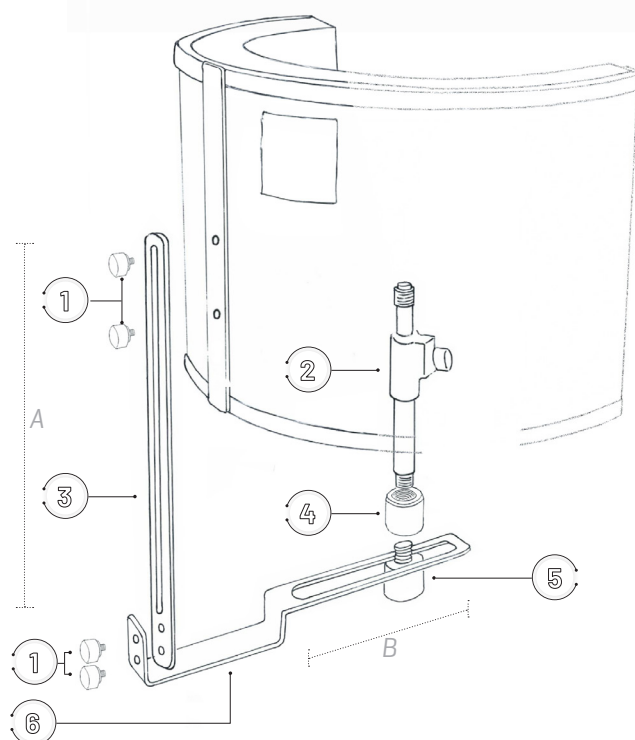


RS05

Microphone reflection screen

Thank you for choosing one of our Woodbrass products. Please read this manual carefully and follow the instructions to avoid any risk of damage to the unit due to improper handling. Keep this user manual for future reference.



ACCESSORY BOX CONTENTS

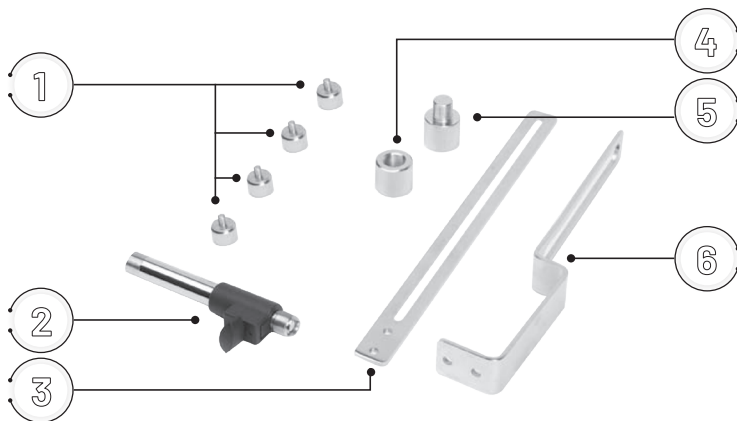

DESCRIPTION

	DESCRIPTION
1	tightening knobs [4 pieces]
2	microphone support tube
3	vertical mounting bar
4	tightening knob for microphone tube
5	tightening knob for microphone stand
6	horizontal mounting bar

ASSEMBLY INSTRUCTIONS

Assemble the components according to the adjacent assembly diagram.

- 1 - Using two knobs (1), attach the bar (3) to the back of the acoustic screen.
- 2 - Locate the two holes at the bottom of the bar (3), align them with the two holes on bar (6), and connect them by tightening two knobs (1).
- 3 - Screw the tightening knob (5) onto a microphone stand with a 5/8" thread.
- 4 - Place the bar (6) over knob (5) and pass the threaded section through the oblong hole.
- 5 - Place knob (4) on top of bar (6) and screw it into the threaded part of knob (5).
- 6 - Screw the microphone support tube (2) into the threaded part of knob (4).
- 7 - The microphone support tube (2) comes with a 3/8" <-> 5/8" thread adapter, allowing for the attachment of any type of clip or shock mount.

A : The screws on bar (4) can be slightly loosened to adjust the height of the acoustic screen. Tighten them once the desired position is reached.

B : The tightening knob [3] can be slightly loosened to adjust the depth of the acoustic screen. Tighten it once the desired position is reached.

